


NS11M (mini) Wiring

Model	Power/Signal Loop(+)	Power/Signal Loop(-)	GND
NS11M	red	black	bare

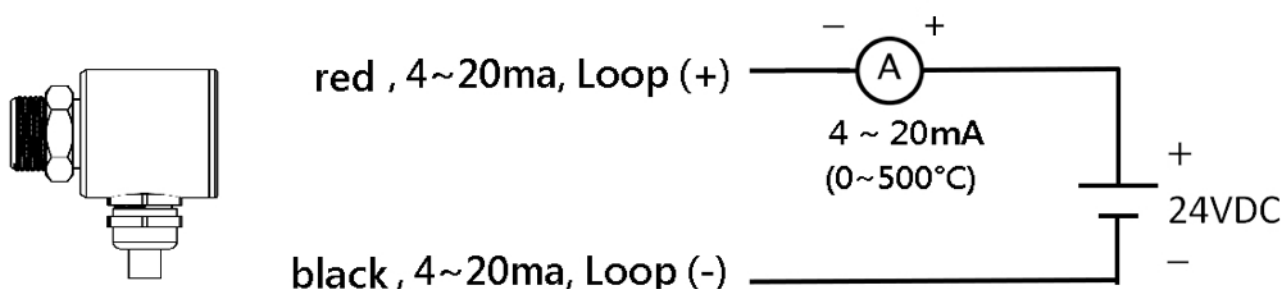

*NOTICE

Thank you for choosing the NS11M infrared thermometer, each single unit passes a quality process before shipment; to ensure its quality and functionality, providing customers with the best service. We need your cooperation in using the NS11M thermometer, please pay attention to the following two things, in order to ensure the unit can functioning properly. Failure to comply with the following requirements resulting damage the unit is not apply to factory's warranty.

1、Power supply:

- a. When connecting a 24VDC power supply to NS11M, be sure to confirm the polarity of power, the positive (+) and negative (-) cannot be reversed, otherwise it will damage the thermometer.
- b. The power supply of NS11M is DC 24VDC @ 100mA. Be sure to use industrial grade power supply to meet the specification. Do not use household level AC Adapter or low cost DC power supply that cannot provide proper protection, in order to avoid over voltage or transient voltage occurs in power system to damage the sensor.

2. Operating (ambient) temperature

NS11M provides non-contact temperature measurement up to 500°C through an optical lens. But the NS11M unit is designed to operate in ambient temperature highest to 70°C. Above this range will result in a permanent damage to electronic components.